CONTENTS

DESCRIPTION	PAGE 12
BEFORE USING THE GLASS CERAMIC HOB	PAGE 13
PRECAUTIONS AND USEFUL SUGGESTIONS	PAGE 14
HOW TO USE YOUR GLASS CERAMIC HOB	PAGE 15
HOW TO USE THE DUAL COOKING ZONE	PAGE 15
COOKING HINTS	PAGE 16
ENERGY SAVING HINTS	PAGE 17
HOW TO CLEAN THE GLASS CERAMIC HOB	PAGE 17
HOW TO INSTALL THE GLASS CERAMIC HOB	PAGE 18
TECHNICAL DATA	PAGE 20
SERVICE	PAGE 20

DESCRIPTION

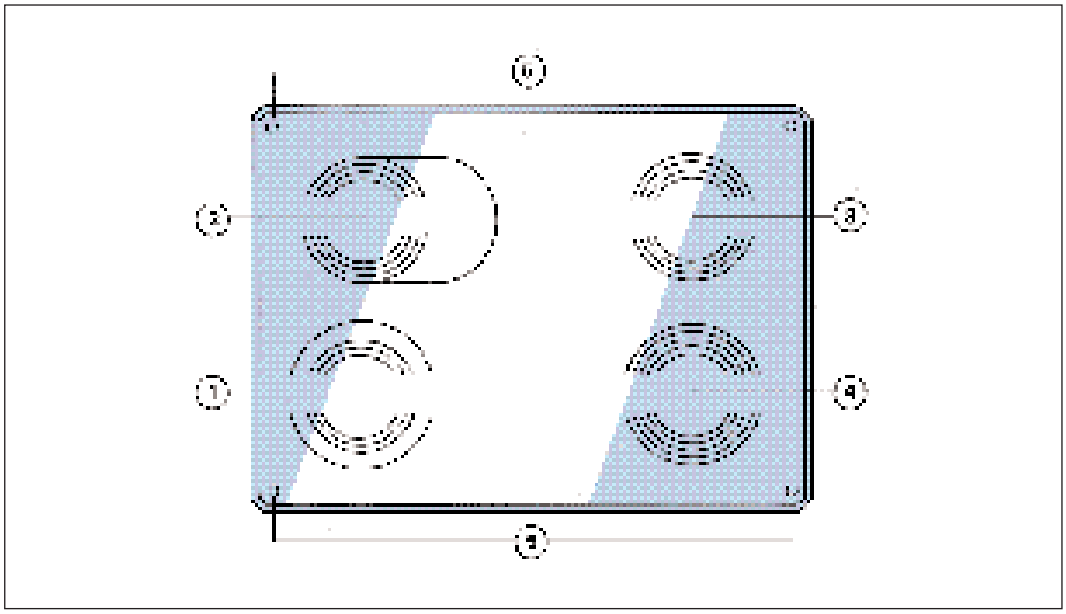

AKM 605

1. Dual zone radiant plate Ø 210x210
2. Oval radiant plate 145x250
3. Haloring plate Ø 145
4. Haloring plate Ø 180
5. Indicator lights

AKM 611

1. Dual zone radiant plate Ø 210x120
2. Oval radiant plate 145x250
3. Quick Star plate Ø 145
4. Quick Star plate Ø 180
5. Indicator lights

BEFORE USING THE HOB

- To make the most of your hob, please read these instructions carefully before use. Keep them for future reference.
- Please ensure that the glass of the hob is not broken and/or cracked.
- The packing parts (plastic bags, polystyrene, scraper, etc.) must be kept away from the reach of children as they can constitute a potential source of danger.

Environmental hints

Packing ♺

Do not throw the packing into the garbage: first sort out the different materials (i.e.: steel, cardboard, polystyrene) following local regulations.

- This appliance has been designed for domestic "cooking" use only.

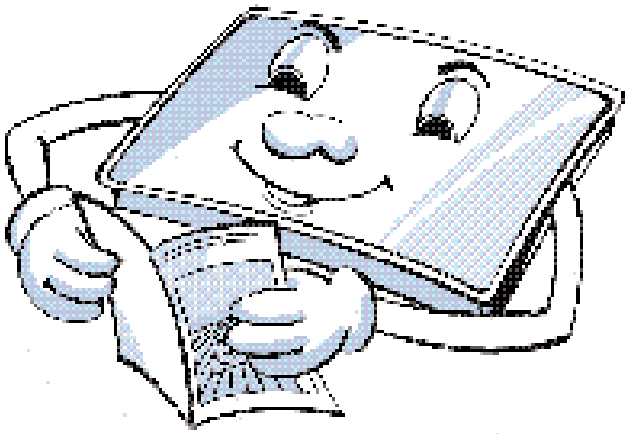

PRECAUTIONS AND USEFUL SUGGESTIONS

- The Manufacturer cannot be held responsible for damages derived from improper, wrong and unreasonable use. (i.e. heating rooms). The use of electric household appliances requires observation of several fundamental rules.
- The glass ceramic hob has a good mechanical strength and can withstand small accidents, misuse; however, if some objects should fall on the surface and damage it, please do not use the hob. Disconnect it from the electrical supply and contact the nearest Service Centre.
- Do not use the glass ceramic hob as a working surface.
- Do not use plastic utensils or aluminium foil containers to cook foods on the glass ceramic hob.
- Before operating the hob, check that the cooking zones are clean, with no grease, food or liquid deposits: do not use pans with wet bases.
- When the hob is in use, the surface of the cooking zones is very hot. For this reason keep children away from it.
- As overheated fats and oils can easily ignite, do not leave frying food unattended.

- Do not operate the cooking zones without anything on them.
- Do not let electric wires (i.e.: of small household appliances) come into contact with warm parts of the hob.
- Remember synthetic clothes, plastic utensils or any other similar materials could ignite on the hob.
- **Take care not to scratch the surface of the glass ceramic hob with the bottom of pans.**
- For best cooking results, we recommend the use of stainless steel pans with flat bases. The diameter of the base must be the same or slightly greater than that of the plate.
- Never sprinkle sugar or sweetened foods such as jams, jellies and juices on the hob. Should it happen, please clean thoroughly the hob by carefully following the cleaning instructions.

HOW TO USE YOUR GLASS CERAMIC HOB

- The cooking zones are clearly marked on the hob surface.
- The switching on, adjustment and switching off of the cooking zones are controlled by turning the knobs situated on the oven clockwise.
  These knobs are marked 0 to 6 or 0 to 11.
  Each number corresponds to a cooking power.

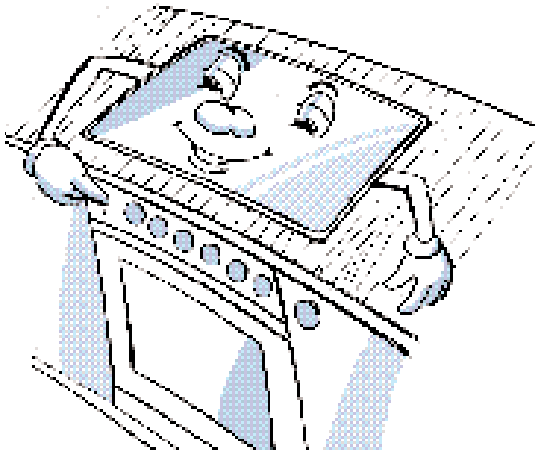

- The hob is provided with 4 indicator lights showing when the cooking zones are hot.
  These indicator lights switch on as soon as the cooking zones reach a high temperature.
  These indicator lights remain on even after switching off of the relevant cooking zone and they switch off only when the temperature of the cooking zone is no longer dangerous.

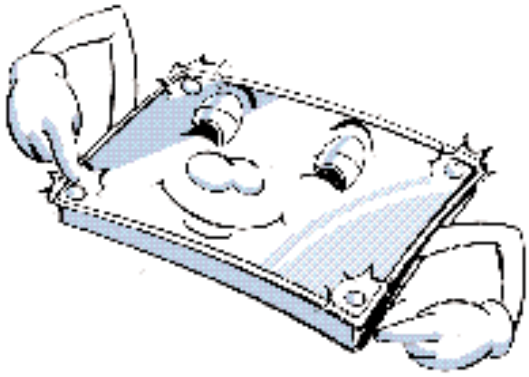

HOW TO USE THE DUAL COOKING ZONE

There is the possibility to increase or enlarge the cooking zone by switching on an additional second zone. You switch on the second zone turning the knob clockwise to the end position (above position 11) ⊙.
Afterwards you can adjust on the requested power (between 11 and 1). To reuse the internal cooking zone, switch off and switch on again.

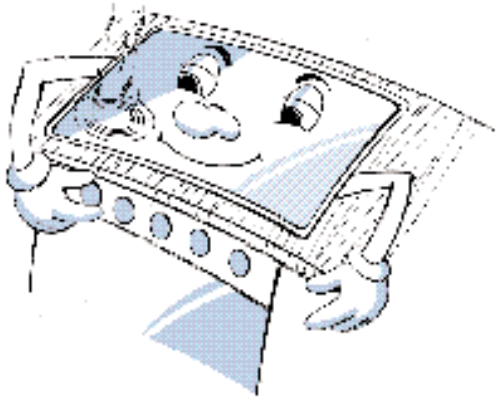

COOKING HINTS

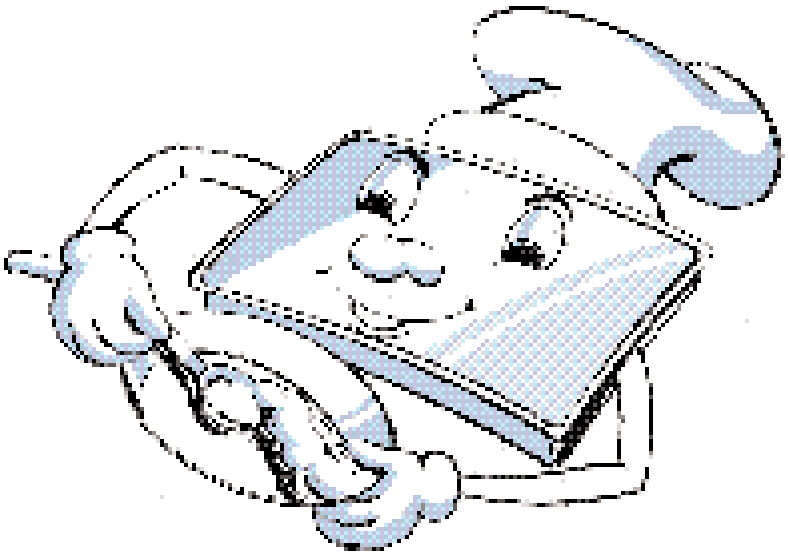

Cooking chart

11 positions Knob	Knobs positions	Suitable for:
6	11	boil water to cook pasta
	10-11	fry potatoes, fish, cook meat
5	9-10	boil potatoes, prepare roasts, steaks,
	8-9	cordon bleu, hamburgers
4	7-8	sausages, liver, eggs
	5-6	prepare soups
3	4-5	steam vegetables and meat
	3-4	boiled fish
2	2-3	rice and milk
	1-2	foods containing milk and eggs steam cooking.: potatoes, vegetables, reheat already cooked foods
1	1	omelette, delicate sauces, melt butter, chocolate, jellies
0	0	off position

The data given in the chart are for indication only.

ENERGY SAVING HINTS

- The bottom of pans must be the same or slightly greater than that of the cooking zone - never smaller.
- Only use pans with a thick flat base.
- Possilby use a cover. You can set a lower power and save energy.
- Boil vegetables, potatoes, etc. with a little water to save energy.
- Pressure pans help to save energy and are quicker than traditional pans.

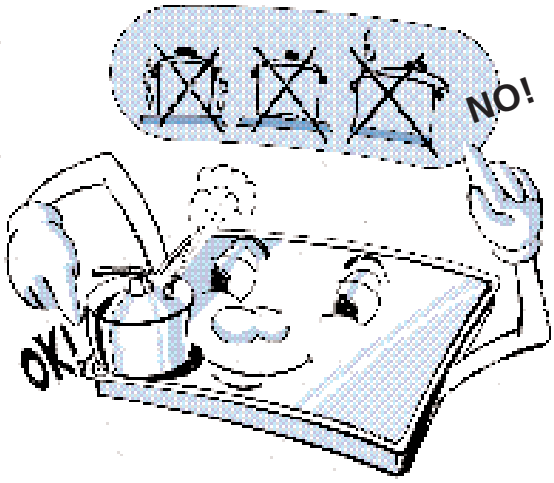

HOW TO CLEAN THE GLASS CERAMIC HOB

- Clean the hob only when it has cooled down. Please make sure that the hob is clean prior to using it.
- To clean the hob, use a sponge or a damp cloth. To clean encrusted foods or fats, use the scraper supplied.
  Important: prior to using the scraper, please read the relevant instructions for use.
- Do not use the scraper on the rim of the hob.
- Only use cleaning products specifically designed for glass ceramic hobs. **Avoid using abrasive cleaners.**

HOW TO INSTALL THE GLASS CERAMIC HOB (FOR THE QUALIFIED TECHNICIAN)

● **IMPORTANT HINTS**

This appliance conforms to EEC directive 87/308/EEC on radiointerference.
It belongs to **Class Y** against fire-risks and may be installed near a column.
Conformity declaration
This appliance incorporates parts intended to come into contact with foodstuffs in compliance with EEC directive 89/109/CEE.
The glass ceramic hob may be installed in a structure with a flat surface from 30 to 50 mm.

A - If the structure is made of wood, use the springs and screws provided with the appliance.

● Position the 4 springs (A) as illustrated, respecting the dimensions shown.

● Fix the springs by the 4 screws (B).

● Mount the hob in the worktop (see drawing).

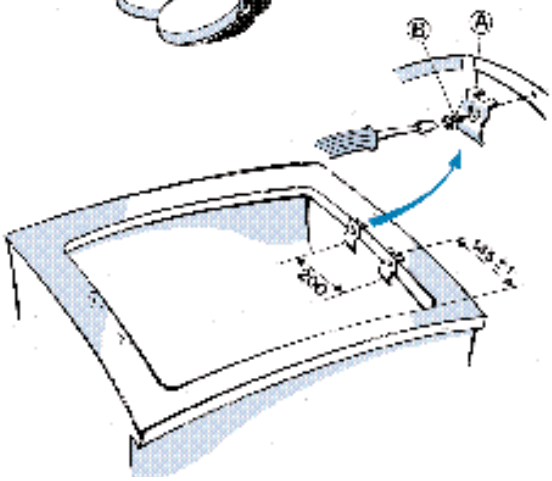

B - If the structure is made of marble or any other material (plastic, ceramic, stone, etc., use particular brackets which can be obtained from Service (code N. 4819 404 78697).

● Position the hob in the worktop.

● Position the 4 brackets (C) as illustrated, dependent on the thickness of the worktop.

● Fix the 4 screws (E) into position (D).

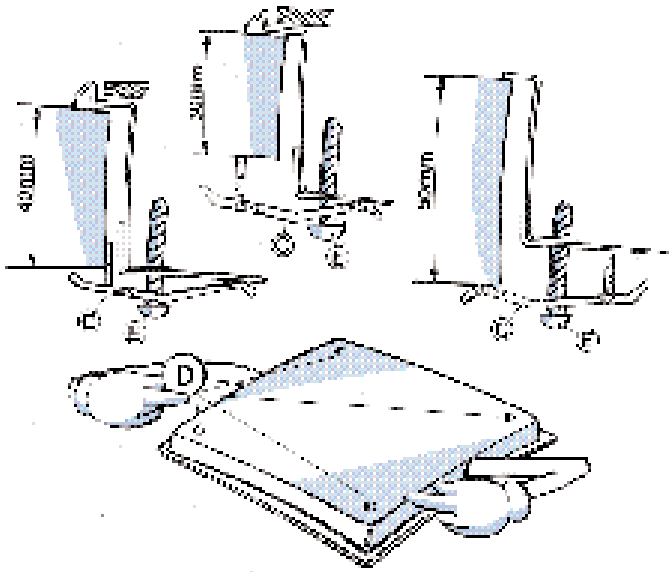

HOW TO INSTALL THE GLASS CERAMIC HOB

Assembly

- Make an opening in the worktop, following the dimension (in mm) shown in the illustration.
- Prior to installing the hob, treat the opening of the worktop with an hydrorepulsive material (i.e.: silicone).
- To facilitate the cutting operations, a template is available by Service (Code N. 4819 395 88003). The distance between the lower face of the glass ceramic hob and the cupboard or separating panel must be at least of 90 mm.

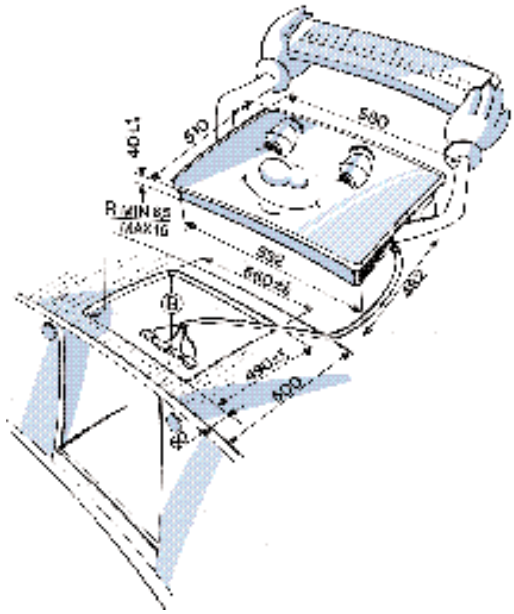

Electrical connection

To be carried out before the electrical connection to the mains.
The appliance must be installed by a competent electrician, with all electrical and installation requirements made in accordance with local regulations.
Ensure that your supply voltage is the same as the voltage stated on the rating plate. The earthing of the appliance is compulsory by law: for this reason all current and earth conductors must be of an appropriate size. Ensure that the earthing is effective.
No liability for damage or injury to persons or property will be accepted from non-observance of these requirements.

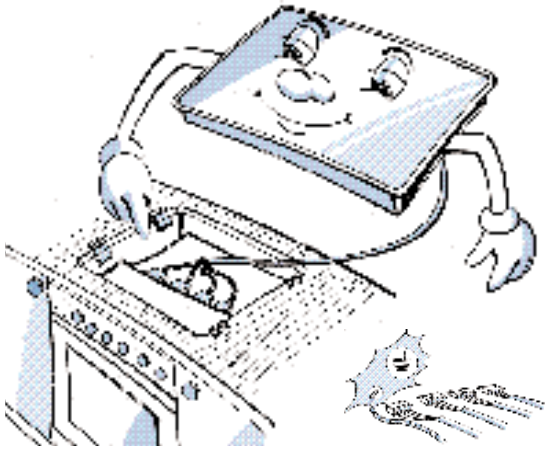

Installation of the hob, coupled with an under the counter oven

- Carry out the earth connection between the hob and the oven as shown.
- Connect the wires of the hob with the oven junction block (top rear) paying attention that the correspondance of the coloured plugs is respected.

After installation of the hob, the electrical parts must be inaccessible.
The installer is responsible of the correct installation of the appliance.

- After the electrical connection, fit the hob from the top and hook it to the support springs, according to the illustration.

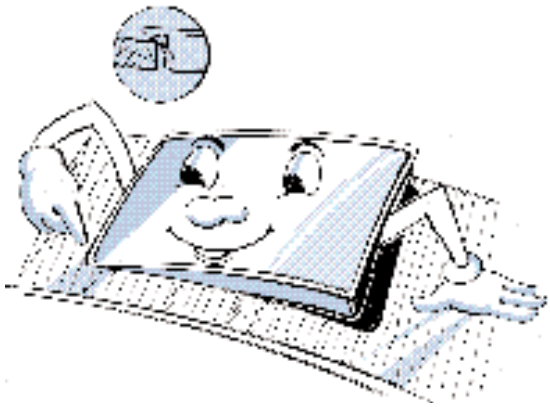

TECHNICAL DATA

Power of the cooking zones 230 V

AKM 605	**Power W**
1. Dual zone radiant plate Ø 210x120	2100 (inner 700 - outer 1400)
2. Oval radiant plate Ø 145x250	1800 (inner 1000 - outer 800)
3. Haloring plate Ø 145	1200
4. Haloring plate Ø 180	1800

AKM 611	**Power W**
1. Dual zone radiant plate Ø 210x120	2100 (inner 700 - outer 1400)
2. Oval radiant plate Ø 145x250	1800 (inner 1000 - outer 800)
3. Quick Star plate Ø 145	1200
4. Quick Star plate Ø 180	1700

SERVICE

- If the hob does not work, contact Service indicating the serial number and the model number which is stated on the guarantee.
- **ATTENTION**
  Repairs must only be performed by authorized Service Centres. It is dangerous for anyone other than a service engineer trained by the manufacturer to repair the product.
- Should your require the ACCESSORY TO PROTECT CHILDREN AMH 122 (Code Nr. 8531 122 01000) please contact Service.